


Door Hinge Adjustment

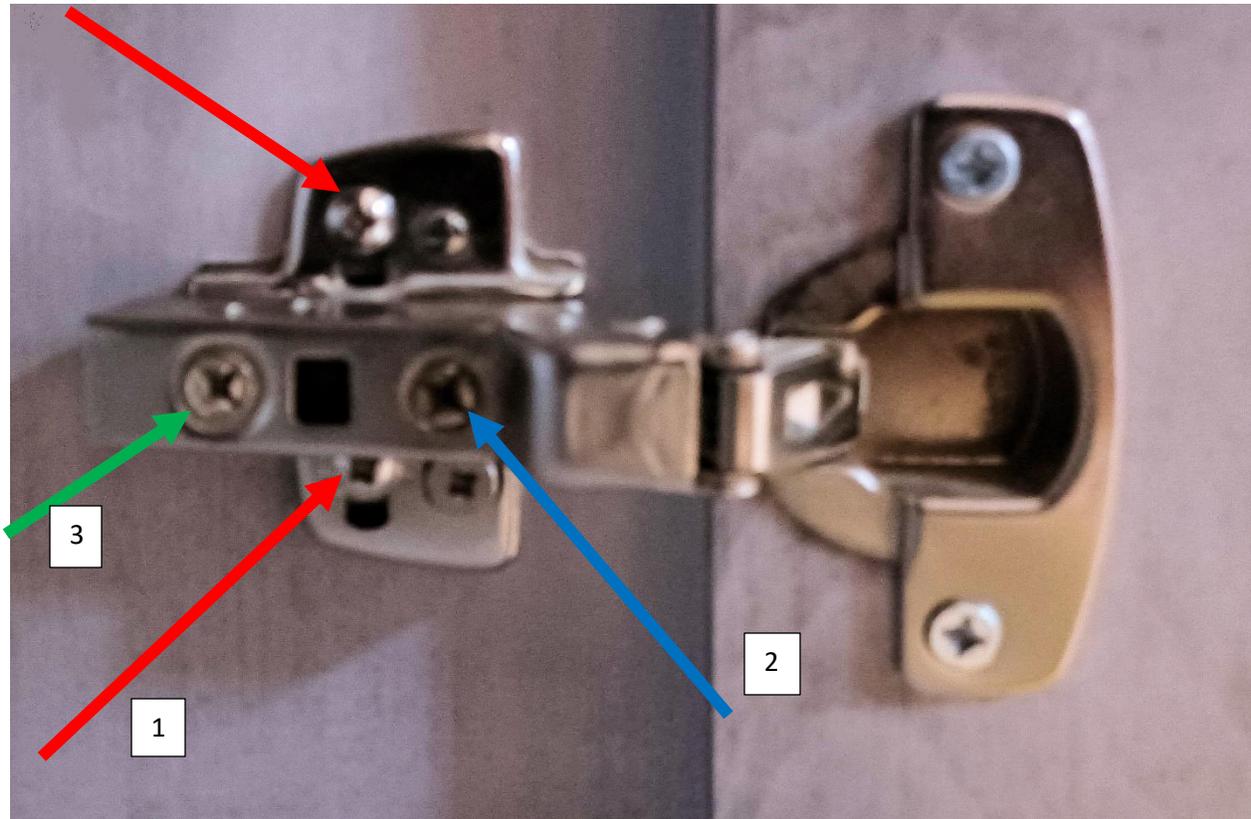

- Use the screws marked with the **red arrows(1)** to move the door up and down to center on the opening. Loosen the screws slightly on both sets of hinges on the door, move the door into the correct position and tighten all 4 screws
- Use the screw marked with the **blue arrow(2)** to move the door from left to right. By turning the screw in a clockwise direction it will move the door towards the end panel that the hinge is mounted to. Counter-clockwise will move the door towards away from the end panel that the hinge is mounted to.
- Use the screw marked with a **green arrow(3)** to move the door towards the front or back of the case if the door is not sitting flat at the top or bottom. By turning the screw clockwise it will move the door out, by turning the screw counter-clockwise it will move the door in towards the case.