

ASSEMBLY INSTRUCTIONS - MIRROR TO DRESSER

NOTE: Use washers & Screws when attaching cleat to dresser back. 2 Display Cleats

UNPACK ALL PARTS

Remove mirror and display cleats from packaging. (Note: Display cleats are packed in side roll pads with opening.) Remove bag of screws and washers.

ATTACH CLEATS TO BACK OF MIRROR

Place the mirror face down. Position display cleats so that the two prebored holes on the cleat line up with the two prebored holes in the mirror and the wide groove in the cleat faces up. Attach each cleat to the mirror with the screws.

POSITION MIRROR

Using a piece of cardboard as a spacer, position the mirror on the dresser, placing the groove in the display cleat over the prebored holes in the dresser. The cardboard should create about 18" space between the bottom of the mirror and the top of the dresser.

ATTACH MIRROR TO DRESSER

Attach the cleats to the dresser using the remaining screws and washers. The washers are required to prevent the screw heads from passing through the groove in the display cleat. Remove cardboard.



