


3000-124B & 3000-144B Center beam and center foot installation

1. Lay all of the slats in the notches in the support rails
2. Screw the center beam to the bottom of the slats using the 3 screws provided
3. Screw the center feet into the threaded inserts in the center beam until tight
4. Turn the leveler in the bottom of the center foot until it reaches the floor and is snug to the floor

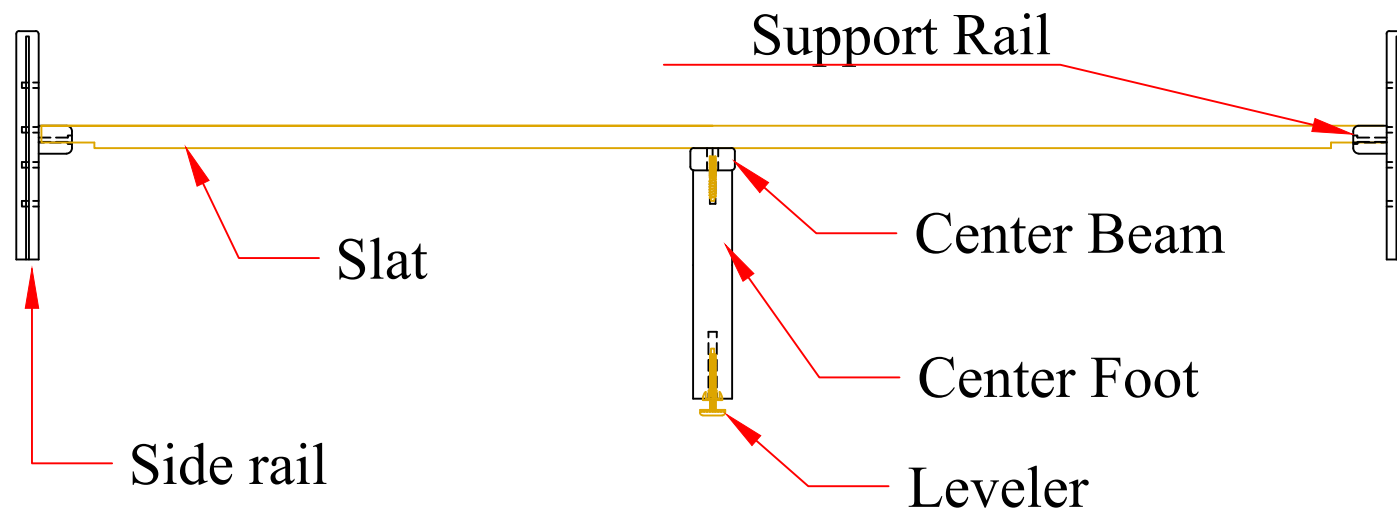

End view of side rail, slat and center feet