

# Select Your Headboard: Headboards, Footboards and Rails shown as Queen size.



HDBD Height 56"  
**Traditional Panel**  
 Twin: 3000-901H Full: 3000-911H  
 Queen: 3000-921H King: 3000-941H




HDBD Height 56"  
**Contemporary Panel**  
 Twin: 3000-902H Full: 3000-912H  
 Queen: 3000-922H King: 3000-942H



HDBD Height 54"  
**Sleigh**  
 Twin: 3000-108H Full: 3000-118H  
 Queen: 3000-128H King: 3000-148H



HDBD Height 54"  
**High Profile Open Panel**  
 Twin: 3000-101H Full: 3000-111H  
 Queen: 3000-121H King: 3000-141H

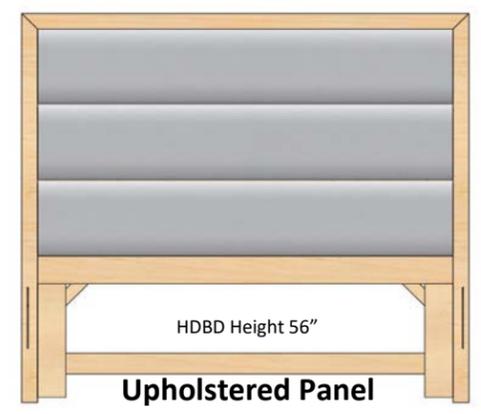

HDBD Height 56"  
**Upholstered Panel**  
 Twin: 3000-106H Full: 3000-116H  
 Queen: 3000-126H King: 3000-146H



HDBD Height 45"  
**Low Profile Open Panel**  
 Twin: 3000-100H Full: 3000-110H  
 Queen: 3000-120H King: 3000-140H



HDBD Height 46"  
**Arch Top w/Metal Panel**  
 Twin: 3000-102H Full: 3000-112H  
 Queen: 3000-122H King: 3000-142H



HDBD Height 46"  
**Arch Fabric Panel**  
 Twin: 3000-103H Full: 3000-113H  
 Queen: 3000-123H King: 3000-143H



HDBD Height 45"  
**Wood Panel**  
 Twin: 3000-104H Full: 3000-114H  
 Queen: 3000-124H King: 3000-144H



HDBD Height 45"  
**Fabric Panel**  
 Twin: 3000-105H Full: 3000-115H  
 Queen: 3000-125H King: 3000-145H

**perfectbalance**  
BY DURHAM FURNITURE

# Select Your Footboard:



**Turned Footboard** \*FTBD Height 19 1/2"  
 Twin: 3000-106F Full: 3000-116F  
 Queen: 3000-126F King: 3000-146F



**Transitional Footboard** \*FTBD Height 19 1/4"  
 Twin: 3000-107F Full: 3000-117F  
 Queen: 3000-127F King: 3000-147F



**Tapered Footboard** \*FTBD Height 19 1/2"  
 Twin: 3000-104F Full: 3000-114F  
 Queen: 3000-124F King: 3000-144F



**Storage Footboard** \*FTBD Height 19 1/4"  
 Twin: 3000-109F + Side rail 3000-109W (1 Drawer)  
 Full: 3000-119F + Side rail 3000-119W  
 Queen: 3000-129F + Side rail 3000-129W  
 King: 3000-149F + Side rail 3000-149W

# Select Your Rails:



**Basic Rail** \*Slat Height 9 1/2"  
 Twin: 3000-76WS Full: 3000-76WD  
 Queen: 3000-80W King: 3000-80WK  
 (Matt/Box Required)



**Lift Rails**  
 Twin: 3000-104P + Steel Frame 3000-76SF  
 Full: 3000-114P + Steel Frame 3000-76DF  
 Queen: 3000-124P + Steel Frame 3000-80QF  
 King: 3000-144P + Steel Frame 3000-80KF  
 (Matt Only)

**Mattress Only** \*Slat Height 13"  
 Twin: 3000-104B Full: 3000-114B  
 Queen: 3000-124B King: 3000-144B



**Rectangular Rail** \*Slat Height 8"  
 Twin: 3000-104R Full: 3000-114R  
 Queen: 3000-124R King: 3000-144R  
 (Matt/Box Required)

**2 Drawer Storage, 1 Side**  
 Twin: 3000-104S Full: 3000-114S  
 Queen: 3000-124S King: 3000-144S



**2 Drawer Storage, 2 Sides** \*Slat Height 17 1/4"  
 Full: 3000-14DA & 3000-14DB  
 Queen: 3000-24DA & 3000-24DB  
 King: 3000-44DA & 3000-44DB  
 (Matt Only - 2 drawers each rail)

**1 Drawer Storage, 1 Side**  
 Twin: 3000-104C Full: 3000-114C  
 Queen: 3000-124C King: 3000-144C



**1 Drawer Storage, 2 Sides** \*Slat Height 17 1/4"  
 Full: 3000-14CA & 3000-14CB  
 Queen: 3000-24CA & 3000-24CB  
 King: 3000-44CA & 3000-44CB  
 (Matt Only - 1 drawer each rail)

Configure your piece at [www.durhamfurniture.com/perfect-balance-furniture](http://www.durhamfurniture.com/perfect-balance-furniture)

# perfectbalance

BY DURHAM FURNITURE

## Clean Maple

No Distressing: Clear Maple with No Physical Distressing




## Wormy Maple

Light Distressing: Wormy Maple with Light Physical Key Distressing & Pin Holes



## Select Your Pieces:

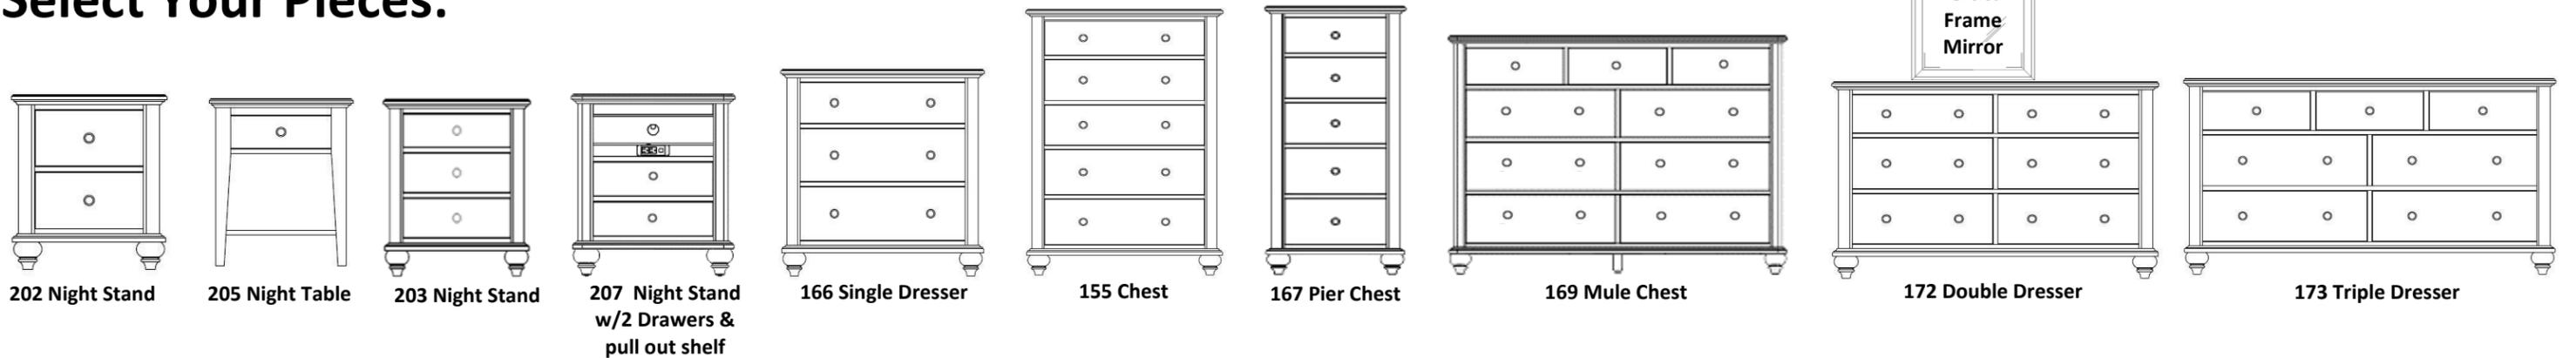

## Select Your Finish: a sample of 40+ finishes available



## Select Your Hardware:

Configure your piece at [www.durhamfurniture.com/perfect-balance-furniture](http://www.durhamfurniture.com/perfect-balance-furniture)



Complete SKU = Collection – Hardware/Piece – Finish (Example: Westend Chest with Hardware A in White is 3201-A155-WHIT)